

Organ Console

Info

The console is stored in a humidified tent to the left of the elevator backstage. The power cannot be unplugged for any long duration to avoid the music people getting angry. The console rides on air like a hovercraft, so **avoid** going on the stage extension or trapdoor unless they are taped over.

Setup

Open the tent and bring over the long power cable by the center door to the stage, then swap the power cable in the tent for that one. The button for air is under the right side of the console. Push it slowly, making sure to avoid walls and any cables on the floor. Once it's in place on stage, run the gray data cable over and plug it in next to the power cable. **Be careful** with the data cable, it's custom.

Strike

Start by removing the data cable. Turn on the air and bring it back to the tent, push it in, making sure the side with the button is at the entrance of the tent. Next, swap the power cables and replace the humidifier. If there are any lights on, use the key on the hall ring to power off the console.

Revision #2

Created 30 April 2025 19:58:35 by Clayton

Updated 30 April 2025 20:40:47 by Clayton